


Klipsch® NASHVILLE




同梱品

スピーカー本体・USB Type-Cケーブル

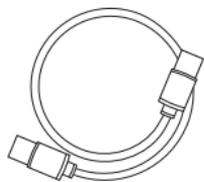

ボタンの説明

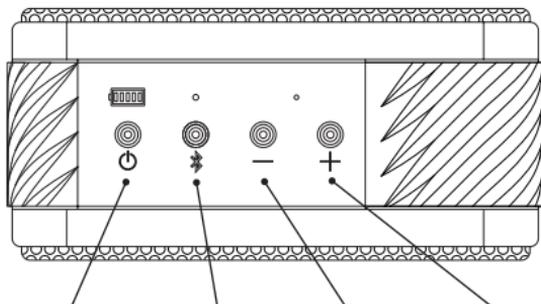

ON / OFF

電源オン/オフ

Bluetooth®

Bluetooth®


Volume Down

音量ダウン


Volume Up

音量アップ


充電方法

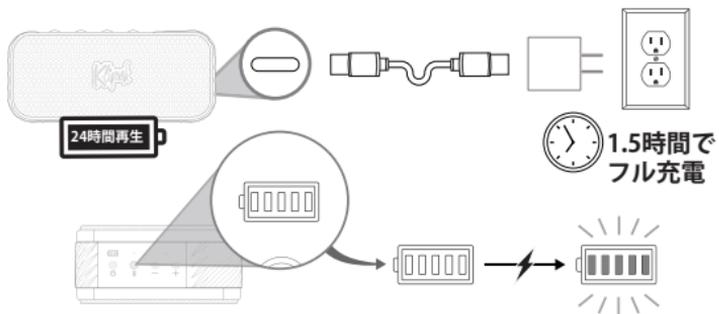

USBを使用したリバース充電

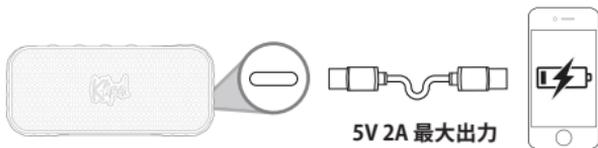

BLUETOOTH® ワイヤレス接続

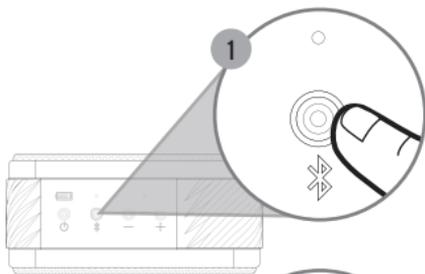


BLUETOOTH®ボタンを
3秒間長押しします




接続中は点滅しています

* 画像は一例です。お使いのデバイスにより異なります。

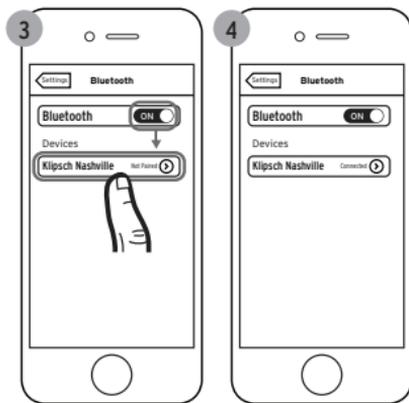


接続が完了すると点灯します

ステレオモード

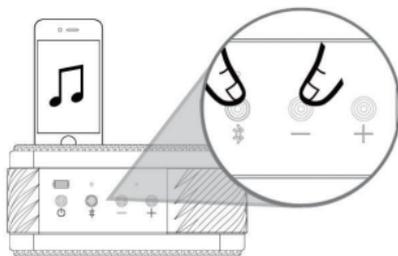

BLUETOOTH®ボタンとマイナスボタンを1秒間同時に押します

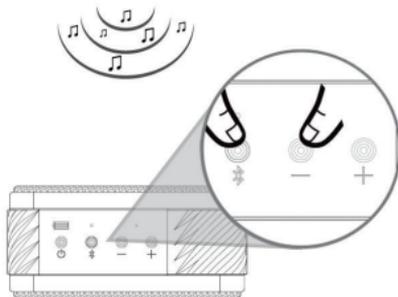


連携させたい2台目のBLUETOOTH®ボタンとマイナスボタンを1秒間同時に押します

3~5秒程すると、両方のスピーカーから同時に連携完了の通知音が鳴ります


連携完了後、1台はBLUETOOTH®ボタンが点灯、もう1台は点滅します

点灯している本体を向かって左側に置くと音源本来のL(左) R(右)と一致します

ブロードキャストモード

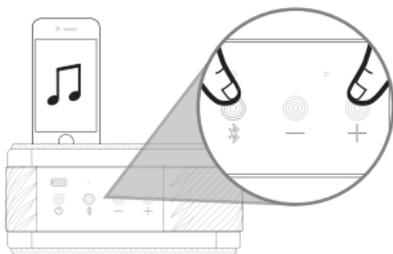



**BLUETOOTH®ボタンとプラスボタンを
1秒間同時に押します**

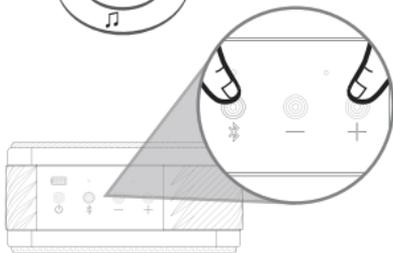


**連携させたい2台目以降のBLUETOOTH®
ボタンとプラスボタンを
1秒間同時に押します**

**3～5秒程すると、両方のスピーカーから
同時に連携完了の通知音が鳴ります**

ブロードキャストモードでのペアリング中は
ボタンが白く点滅しています

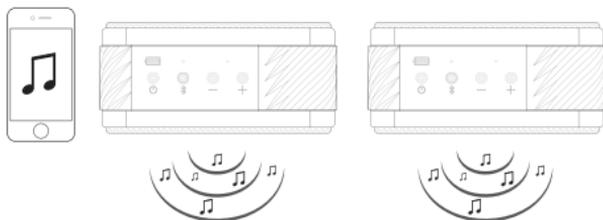

乾いた布で優しく拭いてください

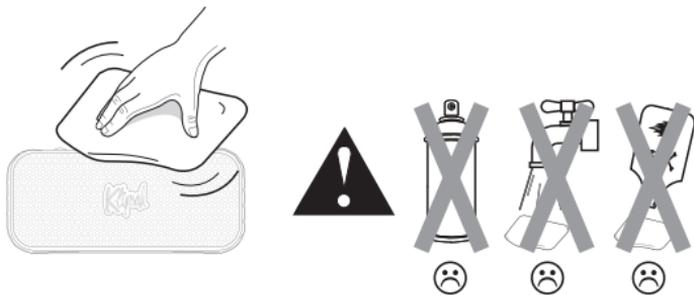

アプリのインストール



Klipsch Connect Plus

- App Store
- Google Play

製品登録、イコライザー調整など
無料でご使用頂けます



©2023, Klipsch Group, Inc. Klipsch Group, Inc. is a wholly-owned subsidiary of Vox International Corporation. Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The *Bluetooth*® word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V04 - 230906